



Table of contents

		Page
Safety Notes / 7	Fechnical support	2
Introducion	Applications / Function / Features Profibus System Implementation	3 4
Technical data	M]
	Dimensions Electrical data Mechanical data Operating conditions Approvals	5 9 10 11 15
Mounting		16
Electrical install		20
Operation - Elec	ctronic module: Standard	24
	ctronic module: Digital	30
	n Hazardous Locations	31
Probe Modification		38

Subject to technical change. All dimensions in mm (inch). We assume no liability for typing errors.

Different variations than specified are possible. Please contact our technical consultants.







Safety notes / Technical support

Notes

- Installation, maintenance and commissioning may be accomplished only by qualified technical personnel.
- The product must be used only in the manner outlined in this instruction manual.
- This product is intended for use in industrial areas. Operation of this equipment in a residential area may cause interference to several frequency based communications.

Special attention must be paid to warnings and notes as follows:

WARNING Relates to a caution symbol on the product: A failure to observe the necessary precautions can result in death, serious injury and/or considerable material damage. WARNING Relates to a caution symbol on the product: Risk of electric shock WARNING A failure to observe the necessary precautions can result in death, serious injury

and/or considerable material damage.

This symbol is used, when there is no corresponding caution symbol on the product.

CAUTION A failure to observe the necessary precautions can result in considerable material damage.

Safety symbols

In manual and on product	Description
\triangle	CAUTION: refer to accompanying documents (manual) for details.
<u></u>	Earth (ground) Terminal
	Protective Conductor Terminal

Technical support

Please contact your local supplier (for address see www.uwt.de). Otherwise you can contact:

 UWT GmbH
 Tel.: 0049 (0)831 57123-0

 Westendstr. 5
 Fax: 0049 (0)831 76879

D-87488 Betzigau info@uwt.de www.uwt.de







Introduction

Applications

CN 8000 is designed for level detection and simple pump control in a variety of applications:

- · Liquids, solids (powder and granules), slurries, interface detection (for example, oil/ water), and foam detection
- Foods and pharmaceuticals
- Chemical and petrochemical
- High pressure and temperature

Function

CN 8000 is a versatile capacitance switch, ideal for level detection of interfaces, solids, liquids, slurries, and foam, and for simple pump control.

The switch responds to the presence of any material with a relative dielectric constant of 1.5 or more by detecting a change in capacitance, which is registered as a change in oscillating frequency.

The switch can be set to detect before contact or on contact with the probe. The design of the CN 8000 allows the instrument to operate independently of the tank wall or pipe, so it does not require an external reference electrode for level detection in a nonconductive vessel such as concrete or plastic.

The power supply is galvanically isolated.

The materials used in the probe construction provide a high level of chemical resistance, and an excellent temperature rating on the process wetted portion of the probe: up to 125 °C (257 °F).

CN 8000 is available in two models: the standard model, and the digital model with integral local display.

Features

- Potted construction protects components from shock, vibration, humidity, and/or condensation
- High chemical resistance on probes
- Level detection independent of tank wall/pipe
- Freely programmable set up covers wide range of applications/materials
- Integrated Local User Interface (LUI) for ease of use
- Rigid and cable versions available
- Communication via PROFIBUS PA (profile version 3.0, Class B)
- Intrinsically Safe (IS) transmitter design for hazardous areas (requires external barrier or IS power supply)



Technical Information / Instruction manual




Introduction

Profibus PA - System Implementation

CN 8000 supports PROFIBUS communication protocol, and SIMATIC PDM software.

Basic PLC configuration with PROFIBUS PA

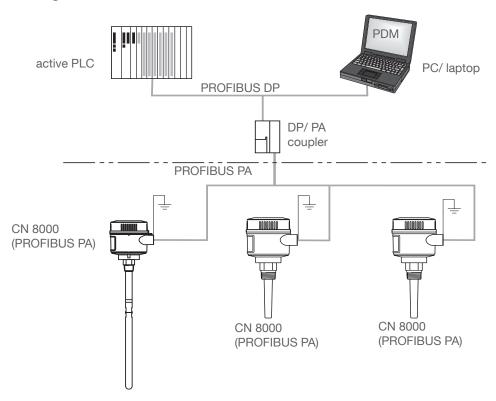

Programming

CN 8000 carries out its level measurement function according to the set of built-in parameters. You can make parameter changes locally via the local user interface, or from a remote location via a PC using SIMATIC PDM software.

CN 8000 Digital can be used either:

- as a standalone unit, programmed locally using the Local User Interface, or
- installed as part of a network, programmed remotely using SIMATIC PDM on Profibus PA network (or locally using the Local User Interface).

Alarm signalling

The solid-state switch can be set to react either to a diagnosed fault in the instrument, or to a change in the process level.

Fault Signalling

CN 8000 can actively report information on its own status via PROFIBUS PA when used as part of a network, or by means of a pre-defined output status at the solid state switch and on the Local User Interface (LUI).




Technical Information / Instruction manual




Technical data - Dimensions

Enclosure


CN 8100 Top view

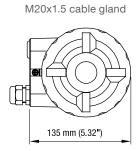


NPT ½" conduit

 



CN 8100 Threaded process connection

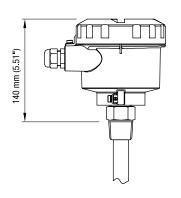

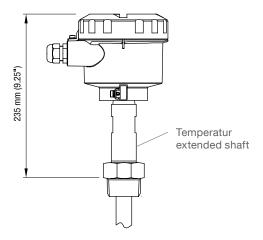



CN 8100 Flanged process connection

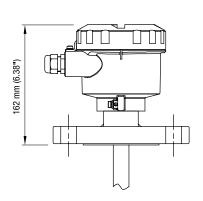

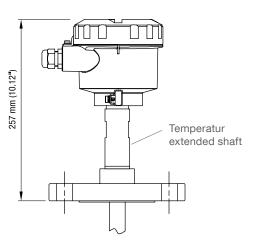

CN 8100 Triclamp process connection

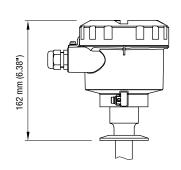

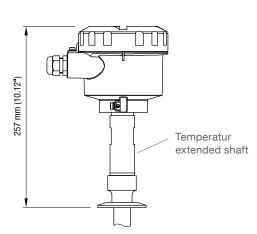



Level limit switch

Series CN 8000

 
Technical Information / Instruction manual




Technical data - Dimensions

CN 8100 Short extension lenght Shortest length


Threaded process connection



Flanged process connection

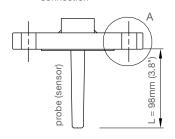


Triclamp process connection

 


CN 8100 Pipe version Extended

 Threaded process connection



Flanged process connection

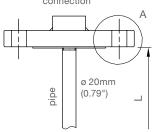


Triclamp process connection



CN 8100 Pipe version

 
Extended, with Sliding coupling (pos.19)




sliding coupling


CN 8100 Cable version

  Threaded process connection





L does not include any raised face (see page 7)

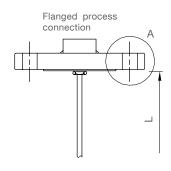




Technical Information / Instruction manual




Technical data - Dimensions

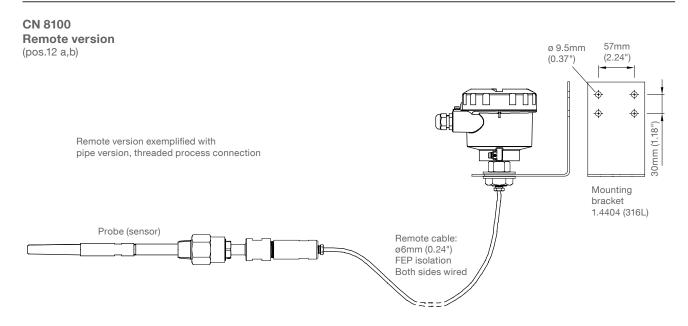


Flanges

	Code	Туре	Number of holes	d2 mm (inch)	Lk mm (inch)	D mm (inch)	thickness mm (inch)
	5A	1" 150 lbs	4	15.9 (0.63)	79.3 (3.12)	108.0 (4.25)	14.3 (0.56)
	5B	1" 300 lbs	4	19.1 (0.75)	88.9 (3.5)	123.8 (4.87)	17.5 (0.69)
	5C	1" 600 lbs	4	19.1 (0.75)	88.9 (3.5)	123.8 (4.87)	17.5 (0.69)
	5D	1½" 150 lbs	4	15.9 (0.63)	98.6 (3.88)	127.0 (5.0)	17.5 (0.69)
ace	5E	1½" 300 lbs	4	22.2 (0.87)	114.3 (4.5)	155.6 (6.13)	20.6 (0.81)
raised face	5F	1½" 600 lbs	4	22.2 (0.87)	114.3 (4.5)	155.6 (6.13)	22.4 (0.88)
raise	5G	2" 150 lbs	4	19.1 (0.75)	120.7 (4.75)	152.4 (6.01)	19.1 (0.75)
	5H	2" 300 lbs	8	19.1 (0.75)	127.0 (5.0)	165.1 (6.5)	22.2 (0.87)
B16.5,	5J	2" 600 lbs	8	19.1 (0.75)	127.0 (5.0)	165.1 (6.5)	25.4 (1.0)
ASME	5K	3" 150 lbs	4	19.1 (0.75)	152.4 (6.01)	190.5 (7.5)	23.9 (0.94)
ASI	5L	3" 300 lbs	8	22.2 (0.87)	168.2 (6.62)	209.6 (8.25)	28.6 (1.13)
	5M	3" 600 lbs	8	22.2 (0.87)	168.2 (6.62)	209.6 (8.25)	31.7 (1.25)
	5N	4" 150 lbs	8	19.1 (0.75)	190.5 (7.5)	228.6 (9.0)	23.9 (0.94)
	5P	4" 300 lbs	8	22.2 (0.87)	200.0 (7.87)	254.0 (10.0)	31.7 (1.25)
	5Q	4" 600 lbs	8	25.4 (1.0)	215.9 (8.5)	273.1 (10.75)	38.1 (1.5)
	6A	DN25 PN16	4	14.0 (0.55)	85.0 (3.35)	115.0 (4.53)	18.0 (0.71)
eq	6B	DN25 PN40	4	14.0 (0.55)	85.0 (3.35)	115.0 (4.53)	18.0 (0.71)
A, flat faced	6C	DN40 PN16	4	18.0 (0.71)	110.0 (4.33)	150.0 (5.91)	18.0 (0.71)
flat	6D	DN40 PN40	4	18.0 (0.71)	110.0 (4.33)	150.0 (5.91)	18.0 (0.71)
e A	6E	DN50 PN16	4	18.0 (0.71)	125.0 (4.92)	165.0 (6.5)	18.0 (0.71)
type,	6F	DN50 PN40	4	18.0 (0.71)	125.0 (4.92)	165.0 (6.5)	20.0 (0.79)
1092-1	6G	DN80 PN16	8	18.0 (0.71)	160.0 (6.3)	200.0 (7.87)	20.0 (0.79)
106	6H	DN80 PN40	8	18.0 (0.71)	160.0 (6.3)	200.0 (7.87)	24.0 (0.94)
N E N	6J	DN100 PN16	8	18.0 (0.71)	180.0 (7.09)	220.0 (8.66)	20.0 (0.79)
	6K	DN100 PN40	8	22.0 (0.87)	190.0 (7.48)	235.0 (9.25)	24.0 (0.94)

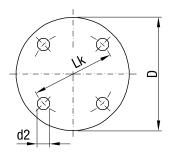

Raised face

 

Туре	Facing thickness
ASME 150 lb ASME 300 lb	2 mm (0.08")
ASME 600 lb	7 mm (0.28")



Technical Information / Instruction manual



Technical data - Electrical data

Electronic module: Standard (Relay SPDT / Solid State)

Power	r
-------	---

Supply	12 to 250 V AC/DC (0 to 60 Hz)
Ex approvals	Max. voltage which does not invalidate the intrinsically safe protection of the sensor (probe): Um = 250V AC
Power consumption	2W max.

Performance

Repeatability ±1% of measurement

User Interface

Configuration	Locally, using dip switches and potentiometers
Local display	3 LED indicators
Output	Relay contact and solid-state switch
Polarity-independent	Yes
Failsafe	Relay and solid-state switch can be de-energized in the absence of a sensor signal

Alarm Outputs

Relay	1 Form C (SPDT) contact (selectable NC or NO contact) max. switching voltage/current (DC): 30 V DC / 5 A max. switching voltage/current (AC): 250 V AC / 8 A (resistive load)
Solid-state switch	Rated 30 V DC or peak 30 V AC, 82 mA
Time delay	ON/OFF alarm, duration selectable 1 to 42 seconds / 1 to 100 seconds
Hysteresis	Dependent on DK: max. 2 mm (0.08") @ DK = 1.5
Failsafe operation	Failsafe High or Failsafe Low
Delay timers	2: Alarm ON to OFF and Alarm OFF to ON

Electronic module: Digital (Profibus PA / Solid State)

Power

Bus	voltage
-----	---------

0 1	40 t- 00 V/DO 40 F A
- General purpose	12 to 30 V DC. 12.5 mA

- Intrinsically Safe 12 to 24 V DC, 12.5 mA, FISCO Field Device

Intrinsically safe barrier required

for ATEX: U $_{i}$ = 24V I $_{i}$ = 380mA P $_{i}$ =5.32W C $_{i}$ =5nF L $_{i}$ = 10uH

for FM/CSA: see page 23

Ex approvals (Flameproof, Dust ignition proof)	Max. voltage which does not invalidate the intrinsically safe protection of the sensor (probe): $Um = 250V$ AC
Starting current < current of normal operation	Yes
Fault current	0 mA (max. uninterrupted current minus current of normal operation)
Fault disconnect equipment (FDE)	Yes
Auxiliary source	Bus powered
Separate supply necessary	No

Performance

Repeatability Approx. \pm 2 mm for a conductive fluid







Technical data - Electrical data

User Interface

Configuration

Locally, using local user interface (LUI), for standalone operation, or Remotely, using SIMATIC PDM on a Profibus PA network

Local Digital Display	LCD
Output (bus)	PROFIBUS PA (IEC 61158 CPF3 CP3/2) Bus physical layer: IEC 61158-2 MBP(-IS)
Polarity-independent	yes
Simultaneous communication with Master Class 2	4 (max.)
Cyclic User data (normal operation)	
Byte output	2 bytes representing one value
Byte input	0
Device profile	PROFIBUS PA Profile for Process Control Devices Version 3.0, Class B
Function blocks	1
Discrete input	1
Logical inversion	Parameterizable
Simulation functions	
Output	yes
Input	yes
Failsafe	Parameterizable (last usable value, substitute value, erroneous value
Block Structure	
Physical block	1
Transducer block	1
Transducer block discrete input	Yes
Monitoring measuring limits	Yes

Solid-state switch Galvanically isolated, non-polarity sensitive transistor

Rated 30V DC or peak AC max., 82mA max Voltage drop below 1 V typical @ 50 mA With Intrinsically safe: barrier required

for ATEX: $U_i = 30V$ $I_i = 200mA$ $P_i = 350mW$ $C_i = 0$ $L_i = 0$

for FM/CSA: see page 23

Time delay Controlled by software

2 delay timers: alarm ON delay and alarm OFF delay)

Hysteresis 100% adjustable

Failsafe operation Failsafe High or Failsafe Low

Terminal Removable terminal block, 2.5 mm² max.

Diagnostics

Input Reed contact: for test function





Technical Information / Instruction manual



Technical data - Mechanical data

Probe

Model	Length (max)	Process Connections	Extension	Tensile (max)	Wetted Parts
Pipe	5,500 mm/ 216.5"	 Threaded: 3/4" 1" 1 ½" BSPT (R), BSPP (G) 3/4" 1" 1 ¼" 1 ½" NPT Welded flange: ASME 1" 1 ½" 2" 3" 4" DN 25 40 50 80 100 Triclamp: 1" 1 ½" 2" 2 ½" 3" ISO2852 	1.4404 (316L)	n/a	1.4404 (316L) optional PFA coating FKM seals optional FFKM PPS probe optional PVDF
Cable	30,000 mm/ 1,181.1"	Threaded: 34" 1" 1 ½" BSPT (R), BSPP (G) 34" 1" 1 ¼" 1 ½" NPT Welded flange: ASME: 1" 1 ½" 2" 3" 4" DN 25 40 50 80 100	FEP (Fluorinated Ethylene Polymer)	180 kg/ 400 lbs	1.4404 (316L) FEP jacketed cable FKM seals optional FFKM PPS probe optional PVDF

Enclosure

Termination	Removable terminal block			
	Tightening torque of terminal screws: 0.5 to 0.6 Nm Conductor cross section:			
	1 conductor - solid: 0.2 to 2.5 mm ² - flexible: 0.2 to 2.5 mm ² - flexible, with ferrule with or without plastic sleeve: 0.25 to 2.5 mm ² - AWG 24 to 12	2 conductors with same cross section - solid: 0.2 to 1.0 mm ² - stranded: 0.2 to 1.5 mm ² - stranded, with ferrule without plastic sleeve: 0.25 to 1.0 mm ² - stranded, TWIN ferrule with plastic sleeve: 0.5 to 1.0 mm ²		
Construction	Powder-coated aluminum with gasket			
Optional thermal isolator	1.4404 (316L) stainless steel			
Cable entry	2 x M20 thread, option: 2 x 1/2" NPT thread with adaptor			
	With ATEX approval: - Default: 2x M20x1.5 - With selection of option Pos.33a	:: 2x NPT ½" tapered ANSI B1.20.1		
Ingress protection	Type 4 / IP65 or IP68 (depending on Cable Entry option)			
	Note: The use of approved watertight conduit hubs/glands is required for Type 4 / IP65 or IP68 (outdoor applications).			
Separation between Zone 0 and Zone 1 (ATEX II 1/2G)	Material of the separation element (partition wall) - Stainless steel, 1.4404 (316L) - Glass, Inconel 600 (Glass seal)			

Weight

Weight varies based on configuration. For example:

• compact, 100 mm (4") insertion length, 34" process connection

1 kg (2.20 lb.) approx.







Technical data - Operating conditions

Environmental

Location	Indoor/outdoor
Altitude	2.000 m (6.562 ft.) max.
Ambient temperature	–40 to 85 °C (–40 to 185 °F)
	With ATEX approval: Depending on Surface Temperature and Temperature Class, details see page 36 / 37.
LUI (local user interface)	–30 to 85 °C (–22 to 185 °F)
Storage temperature	–40 to 85 °C (–40 to 185 °F)
Relative humidity	Suitable for outdoor
Installation category	II (Electronic module : Standard) I (Electronic module : Digital)
Pollution degree	4

Process

Relative dielectric constant	1.5 minimum
Temperature at process connection	Without temperature extended shaft: -40 to 85 °C (-40 to 185 °F) - 20 to 85 °C (-4 to +185 °F) with option FFKM seal O-ring With temperature extended shaft: -40 to 125 °C (-40 to 257 °F) - 20 to 125 °C (-4 to +257 °F) with option FFKM seal O-ring With ATEX approval: Depending on Surface Temperature and Temperature Class, details see page 36 / 37.
Pressure (vessel): - pipe version - cable version / triclamp version - sliding coupling version	-1 to 25 bar g/-14.6 to 365 psi g (nominal) -1 to 10 bar g/-14.6 to 150 psi g (nominal) -1 to 10 bar g/-14.6 to 150 psi g (nominal)

Note: please see Pressure versus Temperature Curves on next pages.









Technical data - Operating conditions

Pressure versus Temperature Curves

Shortest length and extended pipe, threaded

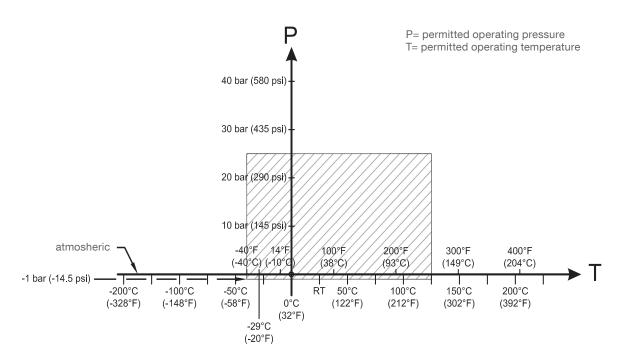

Shortest length and extended pipe, ASME welded flange

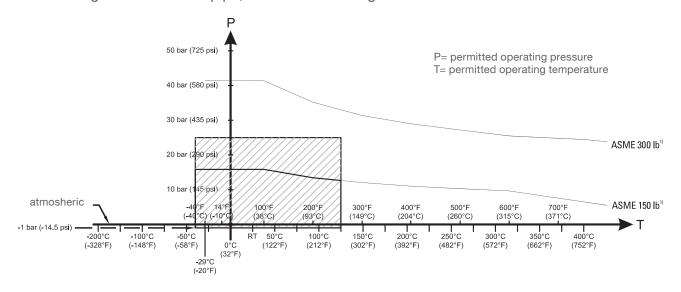


1) The curves denote the minimum allowable flange class for the shaded area below.






Technical data - Operating conditions

Shortest length and extended pipe, EN welded flange

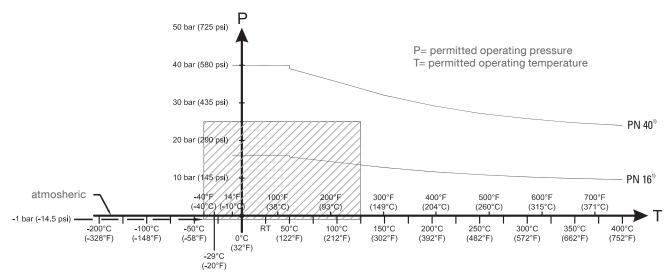

1) The curves denote the minimum allowable flange class for the shaded area below.

Triclamp

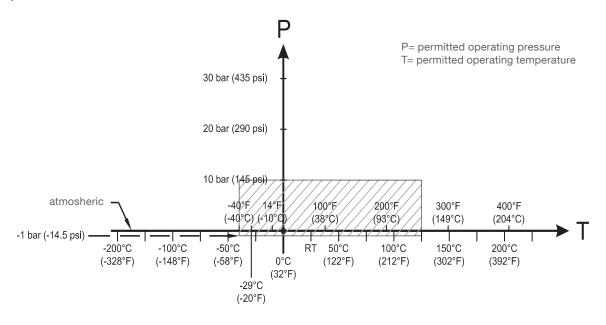




Level limit switch Series CN 8000 Tackrised Information






Technical data - Operating conditions


Cable, threaded

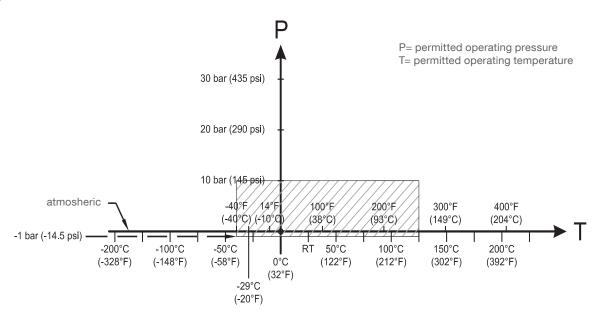

Cable, ASME welded flange

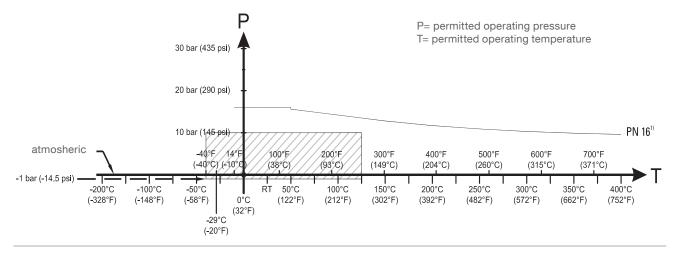

Cable, EN welded flange

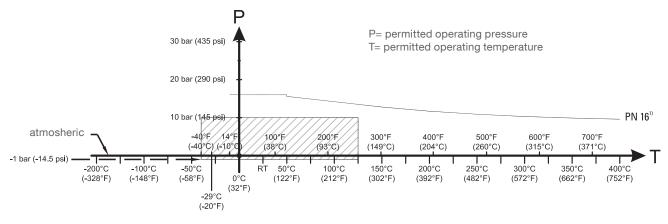

1) The curves denote the minimum allowable flange class for the shaded area below.







Approvals

Electronic module: Standard (Relay SPDT / Solid State)

General Purpose	CE, CSA, FM, TR-CU
Dust Ignition Proof	ATEX II 1/2D, IIIC CSA/FM Class II, Div. 1, Gr. E, F, G Class III TR-CU INMETRO
Flame Proof / Explosion Proof	ATEX II 1/2G, IIC CSA/FM Class I, Div. 1, Gr. A, B, C, D TR-CU INMETRO KC
Marine	Lloyds Register of Shipping, Categories ENV1, ENV2 and ENV5
Overfill Protection	WHG

Electronic module: Digital (Profibus PA / Solid State)

General Purpose	CE, CSA, FM, TR-CU
Dust Ignition Proof	ATEX II 1/2D, IIIC CSA/FM Class II, Div. 1, Gr. E, F, G Class III TR-CU INMETRO
Flame Proof / Explosion Proof	ATEX II 1/2G, IIC CSA/FM Class I, Div. 1, Gr. A, B, C, D TR-CU INMETRO KC
Intrinsically Safe ¹	ATEX II 1G, IIC ATEX II 1/2D, IIIC CSA/FM Class I, Div. 1, Gr. A, B, C, D TR-CU
Type of protection n Non-incendive	ATEX II 3G, IIC CSA/FM Class I, Div. 2, Gr. A, B, C, D

¹ Barrier or Intrinsically Safe power supply required for Intrinsically Safe protection

Note: EN 61326 (CE EMC) testing was conducted while mounted in a metallic vessel and wired using shielded cable, where the cable was terminated in an EMC cable gland at the device entry point. In addition, units with a flange process connection were mounted using a metallic gasket.









Mounting



General Safety Instructions

- Installation shall only be performed by qualified personnel and in accordance with local governing regulations.
- This product is susceptible to electrostatic shock. Follow proper grounding procedures.
- The housing may only be opened for maintenance, local operation, or electrical installation.
- · Before installing the instrument, verify that the environment complies with any restrictions specified on the product nameplate.
- To comply with CE EMC regulations, where applicable, the CN 8000 should be installed in accordance with the testing details on page 15.



Additional Safety Instructions for Hazardous Locations

see page 31ff


Handling Precautions




WARNING:

To prevent damage, all units with a pipe longer than 2 m (6.5 ft) must be handled as described below.

When lifting CN 8000 from a horizontal position, support it at these three points:

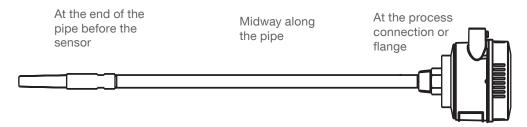

Once vertical, CN 8000 may be held by the process connection or flange:

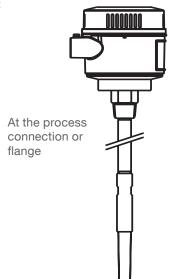

Note:

Unit shown with extended pipe version. Handling precautions apply to all units with pipes longer than 2 m (6.5 ft).





Technical Information / Instruction manual



Mounting

Location

Recommended:


• Provide a sun shield to protect the transmitter from direct heat radiation.

Precautions:


- Avoid mounting CN 8000 in locations subject to strong vibrations in the vicinity, whenever possible.
- Do not exceed the permissible ambient temperature limits (see Environmental on page 11 for details).

Mounting

Compact probe

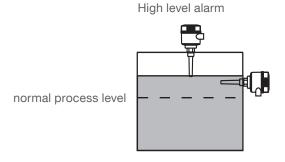

Low level alarm

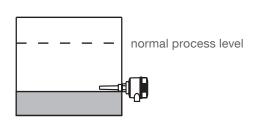

For high level alarm (level exceeds normal process level):

- normally mounted into the vessel top, or
- mounted through the tank wall at the detection level


For low level alarm (level drops below normal process level):

• mounted through the tank wall at the detection level

Typical configuration with extensions

For high or low level alarm:

• designed for top mounting. The probe suspends vertically so that it reaches into the process at the desired detection level (high or low detection alarm).

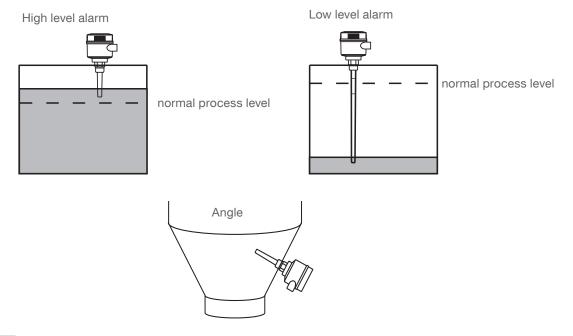



Level limit switch

Series CN 8000

Technical Information / Instruction manual





Mounting

Mounting Restrictions




- Keep the sensor at least 50 mm (2") away from any nozzle or tank wall.
- If multiple units are used, allow at least 100 mm (4") between them, to prevent interference.

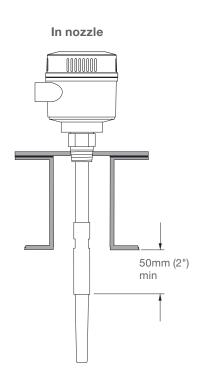


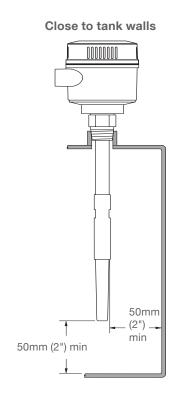


Multiple Units

 Side View



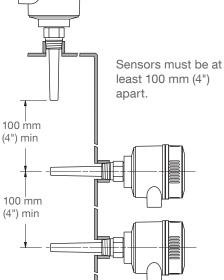

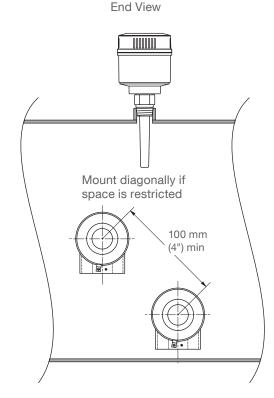






Mounting




Process Cautions for solids


In Hazardous Locations: Observe Specifc condition of use for electrostatic charge (see page 34)

- The maximum allowable torque on a horizontally installed pipe is 15 Nm.
- Keep unit out of path of falling material, or protect probe from falling material.

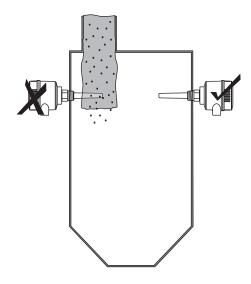


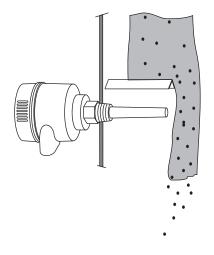


Consider material surface configuration when installing unit.

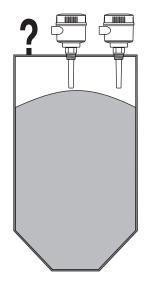

Tensile load must not exceed probe or vessel rating (see Tensile (max) on page 10).

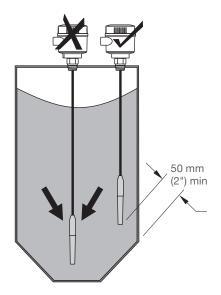

Avoid areas where material build up occurs.

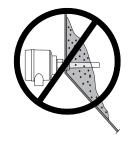







Technical Information / Instruction manual



Electrical installation



General Safety Instructions

Electronic module: Standard (Relay SPDT / Solid State)

WARNING:

- All field wiring must have insulation suitable for at least 250 V.
- Only qualified personnel are authorized to install and operate this equipment in accordance with established safety practices and standards.
- The Protective Earth Terminal indicated by must be connected to reliable ground. Use crimp type cable socket for 4 mm screw diameter, ring form or U-form (e. g. DIN 46234). In case of non-metallic vessels, the external earth wire should be connected to an earthed component which is earthed near the vessel.
- All wiring must be done by qualified personnel in accordance with all governing regulations.
- The equipment must be protected by a 16A fuse or circuit breaker in the building installation.
- A circuit breaker or switch in the building installation, marked as a disconnect switch, shall be in close proximity to the equipment and within easy reach of the operator.
- Use shielded cable, wire gauge 20 AWG to 14 AWG (0.5 mm² to 2.0 mm²). For CE installations use a cable with a braided metallic shield (or armoured cable where applicable).
- Maximum working voltage between adjacent relay contacts is 250 V.
- Relay contact terminals are for use with equipment which has no accessible live parts and wiring which has insulation suitable for at least 250 V.
- Cable entry devices and closing elements of unused apertures must meet a temperature range from min. -40°C to 10 K above max. ambient temperature.

Electronic module: Digital (Profibus PA / Solid State)

WARNING:

- Observe the specifications of the examination certificate valid in your country.
- Observe the laws and regulations valid in your country for electrical installations in potentially explosive atmospheres.
- Refer to Hazardous Area Installation on page 31 if applicable.
- Ensure that the available power supply complies with the power supply specified on the product nameplate and specified in the examination certificate valid in your country.
- Shipping plugs in the cable inlets must be replaced by suitable screwtype glands or dummy plugs, which are appropriately certified for transmitters with explosion-proof protection.
- For CE installations, use a cable with a braided metallic shield (or armoured cable where applicable).
- The lid must not be opened in wet locations while the unit is powered. (A wet location is a location where water or another conductive fluid may be present and is likely to increase the risk of electric shock.)
- Cable entry devices and closing elements of unused apertures must meet a temperature range from min. -40°C to 10 K above max. ambient temperature.

Notes:

- Lay PROFIBUS PA cable separately from power cable with voltages greater than 60 V.
- Avoid locating the unit near large electrical equipment wherever possible.
- Connect the cable shield to earth (for example, to the housing by means of a metallic screwed gland).

Additional Safety Instructions for Hazardous Locations

see page 31ff







Electrical installation

Electronic module: Standard (Relay SPDT / Solid State)

Power supply:


12 to 250 V AC/DC (0 to 60 Hz) 2W max.

Signal output:

Relay:

Floating relay SPDT AC max. 250V, 8A, 2000VA, non inductive DC max. 30V, 5A, 150W, non inductive

Solid state switch: 30 V DC or 30 V AC (peak), 82 mA Observe protection (see below)

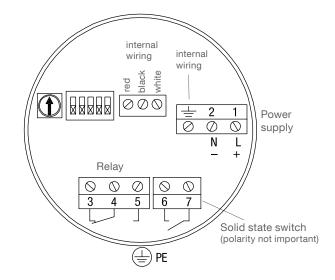

- 1. Loosen the lid clip and remove the lid to access the connectors and electronics.
- 2. Connect the wires to the terminals
- 3. Ground the instrument according to local regulations.
- 4. Tighten the gland to form a good seal.

 
Connect protective earth wire to terminal provided in housing and marked with



Use crimp type cable socket for 4 mm screw diameter, ring form or U-form (e. g. DIN 46234).

Protection of Solid State Switch

Observe a Protection diode in case of connecting an external relay to the Solid state switch



Note: Switch and potentiometer settings are for illustration purposes only.

CN 8000 j gi150917 page 21



Level limit switch

Series CN 8000

Technical Information / Instruction manual



Electrical installation

Electronic module: Digital (Profibus PA / Solid State)

Power supply:

12 .. 30 V DC, 12.5 mA

Intrinsically Safe: 12 .. 24 V DC, 12.5 mA Intrinsically safe barrier required


For ATEX: U_i =24 V, I_i =380 mA, P_i =5.32 W, C_i =5 nF, L_i =10 uH For FM/ CSA: See "Connection drawing on page 23"

Signal output:

Solid state switch: 30 V DC or 30 V AC (peak), 82 mA Observe protection (see below)

Intrinsically safe: Intrinsically safe barrier required

For ATEX: U_i =30 V, I_i =200 mA, P_i =350 mW, C_i =0, L_i =0 For FM/ CSA: See "Connection drawing on page 23"

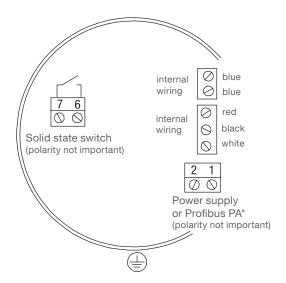

* With use of Profibus PA the wiring must be according to Profibus PA standards. If Profibus PA is not used, a shielded cable is recommended to ensure stable measurement.

 
Connect protective earth wire to terminal provided in housing and marked with




Use crimp type cable socket for 4 mm screw diameter, ring form or U-form (e. g. DIN 46234).

Protection of Solid State Switch:

Observe a Protection diode in case of connecting an external relay to the Solid state switch



Connecting the electronic module:

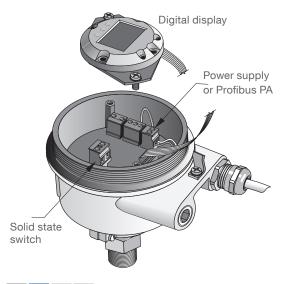

- 1. Loosen the lid clip and unscrew the lid of the enclosure.
- Unscrew and lift up the digital display (loosen each screw two turns before completely loosening both, to keep the rubber retaining rings in place.)
- 3. Connect the wires to the terminals
- 4. Ground the instrument according to local regulations.
- 5. Tighten the cable gland to form a good seal.
- 6. Fix the digital display.
- To adjust the transmitter locally, using the keypad, go to Programming via the Local User Interface (LUI).
 After adjustment, replace the enclosure lid and tighten the lid clip.





Electrical installation

FM/CSA approval Connection drawing

urrent Loop Solid State Output 24 \ 30 \ 30 \ 380 mA 200 mA 5.32 \ 5 nF 0 10 \ \mu H 0 110 \ \mu H 0 Solid State Output 30 \ 1.5 \ W 5 nF 0 10 \ \mu H 0 Intrinsically Safe Apparatus be al Electrical Code (ANSI / NFPA al Electrical Code (CEC) in accordance in accordance solution of AEXial rated Zone 1 or Zone 2, and not	24 V 380 mA 5.32 W 5 nF 10 μ H ust be tional Electrical Codd t be in accordar if connecting to	Output 30 V 110 mA 825 mW 0 0 0 0 6.01 and the Na fition of Canadian installation must eed 30 Volts e 0 applications	Current Loop Output 24 V 380 mA 5.32 W 5 nF 10 μ H Intrinsically Se ANSI / ISA 12.0 h applicable sec is not required, ge must not exc installations for Class I, Zon ansmitter is suita applications	Entity Parameter Ui (Vmax) Ii (imax) Pi Ci Ci Li Li Li Extracted and Associate awith a accordance with a accordance with a cordance with a paratus. The tracedass, Division 1 (dass, Division 1)	AOTES: 1) Fieldbus input: specified to the fisco model 2) Manufacture's installation must be in accordance with applicable section of Canadian Electrical Code (CEC) 3) Either one or both wire pairs between Associated Intrinsically Safe Apparatus must be in accordance with applicable section of Canadian Electrical Code (CEC) 4) For EM: Installation must be in accordance with applicable section of Canadian Electrical Code (CEC) 5) For CSA: Installation, associated apparatus is not required, installation must be used for Class II and III installations 8) The RF 8000 / CN 8000 transmitter is approved for Class I, Zone 0 applications if connecting to AExital rated Associated Intrinsically Safe Applications if connecting to AExital rated Associated Intrinsically Safe Apparatus.	Note 1 & 2 Note 1 & 2 Note 1 N	G T6T4 External frame earth terminal External frame Communication I/O Communication I/O Communication I/O Communication I/O	IS CLASS I, III, III, DIV.1 GROUPS A, B, C, D, E, F & G T6T4 XP CLASS I, DIV. 2 GROUPS A, B, C & D T4 CLASS I, DIV. 2 GROUPS A, B, C & D T4 CLASS II, III, DIV.1 GROUPS E, F & G T4 Temperature class: Temperature clas
			roved Apparatus	əd using FM Appr	9) For FM the unit must be installed using FM Approved Apparatus		de (R)	Installation must in accordance with the National Electrical Code (R) (NFPA 70, Article 504) and ANSI/ISA-RP 12.06.01
o AEx[ia] rated Zone 2, and not	if connecting to ss I, Zone 1 or Z	e 0 applications able only for Clas	for Class I, Zon ansmitter is suita applications	nitter is approved pparatus. The tra Class, Division 1	8) The RF 8000 / CN 8000 Associated Intrinsically \$ suitable for Class 1, Zor			
			l installations	for Class II and III	7) Dust-tight seals must be			
nce	t be in accordar	installation musi eed 30 Volts	is not required, ge must not exc	ciated apparatus and supply volta	6) For Division 2 installation with Division 2 wiring m			
e (CEC)	ı Electrical Cod	tion of Canadian	h applicable sec	n accordance witl	7	;		
Code (ANSI / NFPA	tional Electrical	6.01 and the Na	ANSI / ISA 12.0	accordance with		Note 1 & 2	Communication I/O	In make his biose
	ust be	afe Apparatus mı	d Intrinsically Sa	stween Associate d wires.		1 & 2	Sa.	tput se Switch so Solid state output
/ Safe Apparatus	ated Intrinsically	Ilation of Associa	ollowed for insta	actions must be for		Note		000
				fisco model	1) Fieldbus input: specified		ame earth terminal	External re
					NOTES:		-	
0	10 µH	0	10 µH	ij				RF 8000 / CN 8000 unit
0	5 nF	0	5 nF	Ö				
1.5 W	5.32 W	825 mW	5.32 W	ï				4 for -40°C <= ambient temperature <= +85°C 6 for -40°C <= ambient temperature <= +40°C
200 mA	380 mA	110 mA	380 mA	li (imax)				emperature class:
30 V	24 V	30 V	24 V	Ui (Vmax)				LASS I, DIV. 2 GROUPS A, B, C & D T4 LASS II, III, DIV. 1 GROUPS E, F & G T4
Solid State Output		Output	Current Loop Output	Entity Parameter				CLASS I, II, III, DIV.1 GROUPS A, B, C, D, E, F & G T6T4 CLASS I, DIV. 1 GROUPS A, B, C & D T4
ر ر. ات الله	Current Loop Output	Colid State						




Technical Information / Instruction manual



Operation - Electronic module: Standard

Settings

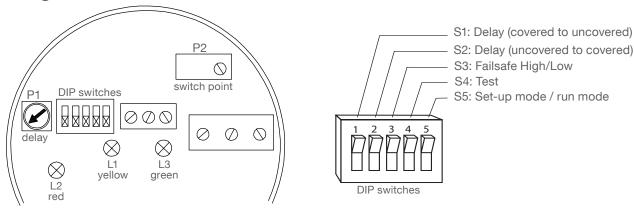


I FDs

- L1: Sensor status (yellow)
 - ON if sensor is detected as covered (capacitance on sensor is greater than setted switch point)
- L2: Signal output (red)
 - ON if Relay is activated / Solid state switch is closed.
- L3: Power supply (green)
 - ON if power is present

S1 / S2: Signal output delay


Use the delay function to slow the signal output response, and compensate for turbulence or false readings.

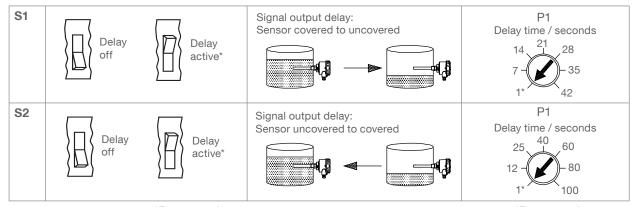

*Factory setting

*Factory setting

S3: Failsafe High / Low

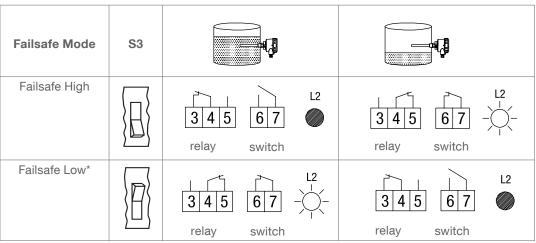

^{*}Factory setting







Operation - Electronic module: Standard

S4: Test

Allows to test the setted signal output delay time without the need to change the sensor from covered to uncovered or from uncovered to covered.

S4	Normal operation*	
S4	Test mode	If sensor is uncovered: Setting S4 to Test mode simulates a covered probe. After the setted delay time "Sensor uncovered to covered" (see DIP switch S2) has passed, the signal output and LED2 (red) are switching. If sensor is covered: Setting S4 to Test mode simulates a uncovered probe. After the setted delay time "Sensor covered to uncovered" (see DIP switch S1) has passed, the signal output and LED2 (red) are switching.

^{*}Factory setting

S5: Set-up mode / run mode

S 5	Run mode*	Normal operation after switchpoint adjustment is complete.
S5	Set-up mode	Use this setting only during switchpoint adjustment.

^{*}Factory setting





Operation - Electronic module: Standard

Switchpoint Adjustment

Select the switchpoint adjustment according to the application as follows:

Application	Material	Adjustment conditions
General	Dry solids Low viscosity liquids	Sensor uncovered
Demanding	Hygroscopic / wet solidsHigh viscosity and high conductivity liquids	Sensor immersed and then uncovered, retaining max. possible material buildup
Interface detection	Ignoring liquid A / detecting liquid B Ignoring foam / detecting liquid	Immerse sensor in liquid A or foam

General applications

Ensure material level is well below the probe	The unit will calibrate to an uncovered probe.	
2. Set to Set-up mode	Set dip switch S5 to Set-up mode	S5 \B
3. Adjust switchpoint with poti P2	If LED L1 (yellow) is OFF, turn poti P2 counter clockwise until L1 is ON.	P2 yellow ———————————————————————————————————
	Turn P2 clockwise until L1 just stops glowing.	
4. Set to Run mode	Set dip switch S5 to Run mode	S5
Switchpoint adjustment is finished		





Operation - Electronic module: Standard

Demanding applications

Ensure material level is well above the probe.	In case of top mounting with cable extension the vessel should be filled up.	
2. Ensure material level is well below the probe	It is important that as much material buildup as possible is retaining on the sensor.	
3. Set to Set-up mode	Set dip switch S5 to Set-up mode	S5 \\
4. Adjust switchpoint with poti P2	If LED L1 (yellow) is OFF, turn poti P2 counter clockwise until L1 is ON.	P2 yellow ———————————————————————————————————
	Turn P2 clockwise until L1 just stops glowing.	
5. Set to Run mode	Set dip switch S5 to Run mode	S5
Switchpoint adjustment is finished		





Operation - Electronic module: Standard

Interface detection

Immerse probe in liquid A or in foam which should NOT be detected	Ensure that liquid A or foam (which should NOT be detected) is covering the probe. Liquid A or foam must have a lower dielectric constant than liquid B, which should be detected.	Liquid A or foam Liquid B
2. Set to Set-up mode	Set dip switch S5 to Set-up mode	S5 \
3. Adjust switchpoint with poti P2	If LED L1 (yellow) is OFF, turn poti P2 counter clockwise until L1 is ON.	P2 yellow ———————————————————————————————————
	Turn P2 clockwise until L1 just stops glowing. Note: The sensitivity is now setted thus that liquid A or foam is NOT detected.	
4. Set to Run mode	Set dip switch S5 to Run mode	S5 \ \ \ \
5. Immerse probe in liquid B which should be detected	Ensure that liquid B (which should be detected) is covering the probe. Liquid A or foam L1 should glow. Liquid B	L1 yellow
Switchpoint adjustment is finished		





Operation - Electronic module: Standard

Troubleshooting

Symptom	Observation	Action
No Alarm Response	L3 (green) off.	Check power supply voltage.
Alarm doesn't switch when sensor	L1 (yellow) doesn't respond when sensor is uncovered.	Readjust trip point potentiometer P2.
is uncovered.	L1 (yellow) responds when sensor is uncovered.	Check that relay changes state when S3 is toggled ON and OFF.
Alarm doesn't switch on when	L1 (yellow) doesn't respond when sensor is covered.	Readjust trip point potentiometer P2.
sensor is covered.	L1 (yellow) responds when sensor is covered.	Check that relay changes state when S3 is toggled ON and OFF.
	L1 (yellow) flashes when material level approaches the alarm setpoint.	

CN 8000 j gi150917 page 29





Operation - Electronic module: Digital

See separate "Operating Manual (Digital Electronic)"





Notes for use in Hazardous Locations

Use of this Manual

For use and assembly, refer to the instructions in this Manual. It does contain all instruction as required by ATEX Directive 2014_34_EU , Annex II, 1/0/6 and Ordinance INMETRO n° 179/2010

General notes

Refer to appropriate certificate for application in specific hazardous environment.

The equipment has not been assessed as a safety related device (as referred to by Directive 2014_34_EU Annex II, clause 1.5).

The certificate numbers have an 'X' suffix, which indicates that specific condition of use apply. Those installing or inspecting this equipment must have access to the certificates.



Qualification of personnel / Servicing / Repair

Installation and inspection of this equipment shall be carried out by suitably trained personnel in accordance with the applicable code of practice (ABNT NBR IEC/EN 60079-14 and ABNT/NBR IEC/EN 60079-17 in Europe).

Repair of this equipment shall be carried out by suitably trained personnel in accordance with the applicable code of practice (e.g. ABNT NBR IEC/EN 60079-19 within Europe).

Repair of flameproof path is not intended.

Components to be incorporated into or used as replacements in the equipment shall be fitted by suitably trained personnel in accordance with the manufacturer's documentation.

In potentially explosive atmospheres open the enclosure only when CN 8000 is not energized. Turn off power before servicing any device (the transmitter is in operation when the power supply is switched on). In case of removing the unit from vessel, take care of process pressure and material passing the opening.

ATEX: Certificates / List of Standards

Certificate numbers: DEKRA 18ATEX0042 X and DEKRA 18ATEX0044 X

See www.uwt.de for the latest certificates

See EU - Declaration of conformity for the list of standards valid for ATEX certificates

ATEX: Year of manufacturing

Marking on the name plate is done according to IEC 60062 as follows:

Year of manufacturing	2018	2019	2020	2021	2022	2023	2024	2025	2026	2027	2028	2029
Marking code	K	L	M	N	Р	R	S	Т	U	V	W	X

CN 8000 j gi150917 page 31







Notes for use in Hazardous Locations

ATEX: Ex-Marking

• Devices with ATEX approval are marked on the name plate as follows.

• If both Flameproof and Dust ignition proof are present on the same nameplate, a tick box is present where the end user needs to select (mark) the protection method used at the time of installation.

	oof with intrinsically safe out e: Standard and Digital	put to probe (Typecode Pos.2 W)
Integral version:		II 1/2 D Ex ia/tb [ia Da] IIIC TX Da/Db
Remote version:	Electronics enclosure:	II 2(1) D Ex ia tb [ia Da] IIIC TX Db
	Level probe:	II 1 D Ex ia IIIC TX Da
		II 1/2 D Ex ia IIIC TX Da/Db
	ust Ignition proof with intri e: Standard and Digital	nsically safe output to probe (Typecode Pos.2 T)
Integral version:		\square II 1/2 G Ex ia/db [ia Ga] IIC TX Ga/Gb
		☐ II 1/2 D Ex ia/tb [ia Da] IIIC TX Da/Db
Remote version:	Electronics enclosure:	☐ II 2(1) G Ex db ia [ia Ga] IIC TX Gb
		☐ II 2(1) D Ex ia tb [ia Da] IIIC TX Db
	Level probe:	II 1 G Ex ia IIC TX Ga
		II 1 D Ex ia IIIC TX Da
		II 1/2 D Ex ia IIIC TX Da/Db
Intrinsically Saf Elektronic modul	e (Typecode Pos.2 Y) e: Digital	
Integral version:		II 1 G Ex ia IIC TX Ga
		II 1/2 D Ex ia IIIC TX Da/Db
Remote version:	Electronics enclosure:	II 1 G Ex ia IIC TX Ga
		II 2 D Ex ia IIIC TX Db
	Level probe:	II 1 G Ex ia IIC TX Ga
		II 1 D Ex ia IIIC TX Da
		II 1/2 D Ex ia IIIC TX Da/Db
Type of protecti Elektronic modul	on n (Typecode Pos.2 G) e: Digital	
Integral version:		II 3 G Ex ic nA IIC TX Gc
Remote version:	Electronics enclosure:	II 3 G Ex ic nA IIC TX Gc

Level probe:

II 3 G Ex ic IIC TX Gc





Notes for use in Hazardous Locations



ATEX: Permitted zones for installation

Integral version

Devices can be installed as follows:

	Dust applications	Ga	s applicatio	ons	Sliding coupling Shortest length Cable
Marking	Da/Db	Ga/Gb	Ga	Gc	and pipe extension version
EPL	Db	Gb	Ga	Gc	
Category	2D	2G	1G	3G	
Zone	21	1	0	2	Ambient side
EPL	Da	Ga	Ga	Gc	Process side
Category	1D	1G	1G	3G	
Zone	20	0	0	2	

Remote version


Devices can be installed as follows:

Marking
electronics enclosure
EPL
Category
Zone
Marking
sensor probe
EPL
Category
Zone

EPL	
Category	
7one	

Dust app	lications	Gas applications		
Db	Db	Ga	Gb	
Db	Db	Ga	Gb	
2D	2D	1G	2G	
21	21	0	1	
Da/Db	Da	Ga	Ga	
Db	Da	Ga	Ga	
2D	1D	1G	1G	
21	20	0	0	

Da	Da	Ga	Ga
1D	1D	1G	1G
20	20	0	0

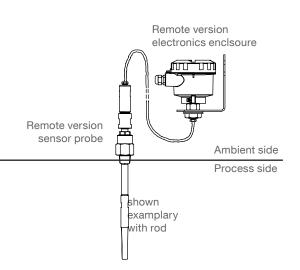





Notes for use in Hazardous Locations



Specific condition of use

Electrostatic
charge

The user shall ensure that the equipment is not installed in a location where it may be subjected to external conditions which might cause a build-up of electrostatic charge on non-conducting surfaces.

Impact / Friction Because the enclosure and optionally the process connection of the equipment is made of aluminium alloy, the apparatus must be installed so, that even in the event of rare incidents, an ignition source due to impact or friction between enclosure and iron / steel is excluded, when used in potentially explosive atmosphere requiring apparatus of equipment 1G.

Flameproof joints

The flameproof joints are not intended to be repaired.

Transient limitation for Type of protection n


A transient protection device shall be used, set at a level not exceeding 140 % of the peak rated voltgae of 85 V.

Ambient and process temperature range

The relation between the ambient and process temperature ranges and the surface temperature or temperature class is shown in the thermal data tables page 36 / 37.

Max. permitted to the enclosure

If the process temperature exceeds the max. temperature close permissible ambient temperature, the max. resulting temperature at the connection of the sensor head (see dotted line) shall not exceed the related max. permissible ambient temperature (see page 36 / 37), taking the worst case conditions into account. This shall be verified by measurement when installed.

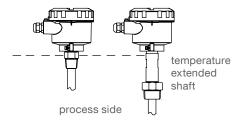





Notes for use in Hazardous Locations



Warnings for installation

Intrinsically safe
supply
Process pressur

For intrinsically safe models, power must be supplied from an Intrinsically Safe power source, otherwise protection is no longer guaranteed.

cess pressure The device construction allows process over-pressure up to 10 or 25 bar (146 or 365 psi). This pressure is allowed for test purposes. The definition of the Ex approvals are only valid for a container-over-pressure between -0.2 .. +0.1 bar (-2.9 .. +1.45 psi). For higher or lower pressures the approvals are not valid.

Process and ambient temperature

Please check the ambient and process temperatures page 36 /37 for the specific configuration you are about to use or install.

Chemical resistance against the medium

If the equipment is likely to come into contact with aggressive substances, then it is the responsibility of the user to take suitable precautions that prevent it from being adversely affected, thus ensuring that the type of protection is not compromised. Aggressive substances: e.g. acidic liquids or gases that may attack metals, or solvents that may affect polymeric materials. Suitable precautions: e.g. establishing from the material's data sheet that it is resistant to specific chemicals.

Cable entry devices / blanking elements general

Dust Ignition Proof:

For use in in potentially explosive dust atmospheres:

The cable entry devices and the blanking elements of unused apertures shall be of a certified type, suitable for the conditions of use and correctly installed.

The minimum ingress protection requirement of IP6X according to EN 60529 must be satisfied.

Flameproof:

For use in potentially explosive gas atmospheres:

The cable entry devices and the blanking elements of unused apertures shall be of a certified flameproof type, suitable for the conditions of use and correctly installed.

Intrinsically Safe / Type of protection n:

The cable entry devices and the blanking elements of unused apertures shall be of a certified type, suitable for the conditions of use and correctly installed.

The minimum ingress protection requirement of IP64 according to EN 60529 must be satisfied.

Versions with cable gland mounted by default:

The used cable gland is only suitable for fixed installations.

The installer is responsible for providing appropriate strain-relief to prevent pulling or twisting.

Versions with blanking element mounted by default:

Blanking elements are not to be used with any form of adaptors or reducers.

Versions with cable gland / blanking element mounted by default

Below-mentioned cable diameters and tightening torques of the nut resp. blanking element shall be observed for the installation.

Cable gland M20x1.5 (Dust Ignition Proof, Intrinsically Safe, Type of protection n)

Cable diameter: 6 mm to 12 mm

Tightening torque: Depending on the used cable and therefore to be determined by the user

Cable gland M20x1.5 (Flameproof)

Cable diameter: Bedding 3.1 mm to 8.6 mm / Overall 6.1 mm to 13.1 mm

Tightening torque: Number of turns depending on the overall cable diameter of the used cable (e. g. 1 turn / cable diameter 12.5 mm to 5.5 turns / cable diameter 6.5 mm)

Blanking element M20x1.5 (all versions)

Tightening torque: 32.5 Nm



gi150917 CN 8000 j page 35



Technical Information / Instruction manual



Notes for use in Hazardous Locations

Ambient and process temperature range, max. Surface Temperature andTemperature Class

ATEX:

Flameproof and Dust Ignition Proof with intrinsically safe output to probe (Typecode Pos.2 W,T) Electronic module: Standard and Digital

- Integral version
- Remote version: level probe

Ambient temperature range	Process temperature range	Max. Surface temperature	temperature	Temperature class
		(EPL Da)	(EPL Db)	(EPL Ga or Gb)
-40 to +45°C (-40 to +113°F)	-40 to +45°C (-40 to +113°F) (2)	T ₂₀₀ 95°C	T55°C	T6
-40 to +60°C (-40 to +140°F)	-40 to +60°C (-40 to +140°F) (2)	T ₂₀₀ 110°C	T70°C	T5
-40 to +80°C (-40 to +176°F)	-40 to +95°C (-40 to +203°F) (1) (2)	T ₂₀₀ 145°C	T90°C	T4
-40 to +80°C (-40 to +176°F)	-40 to +125°C (-40 to +257°F) (1) (2)	T ₂₀₀ 175°C	T90°C	T3

- Remote version: electronics enclosure

Ambient temperature range	Max. Surface temperature (EPL Db)	Temperature class (EPL Gb)
-40 to +45°C (-40 to +113°F)	T55°C	T6
-40 to +60°C (-40 to +140°F)	T70°C	T6
-40 to +80°C (-40 to +176°F)	T90°C	T5

Intrinsically safe (Typecode Pos.2 Y)

Electronic module: Digital

- Integral version
- Remote version: level probe

Ambient temperature range	Process temperature range	Max. Surface temperature (EPL Da)	Max. Surface temperature (EPL Db)	Temperature class (EPL Ga or Gb)
-40 to +45°C (-40 to +113°F)	-40 to +45°C (-40 to +113°F) (2)	T ₂₀₀ 95°C	T55°C	T6
-40 to +60°C (-40 to +140°F)	-40 to +60°C (-40 to +140°F) (2)	T ₂₀₀ 110°C	T70°C	T5
-40 to +60°C (-40 to +140°F)	-40 to +95°C (-40 to +203°F) (1) (2)	T ₂₀₀ 145°C	T70°C	T4
-40 to +60°C (-40 to +140°F)	-40 to +125°C (-40 to +257°F) (1) (2)	T ₂₀₀ 175°C	T70°C	T3

- Remote version: electronics enclosure

Troniero vereieni electronico chelectro			
	Ambient temperature	Max. Surface temperature	Temperature class
	range	(EPL Db)	(EPL Ga)
	-40 to +45°C (-40 to +113°F)	T55°C	T6
	-40 to +60°C (-40 to +140°F)	T70°C	T4

Type of protection n (Typecode Pos.2 G)

Electronic module: Digital

- Integral version
- Remote version: level probe

Ambient temperature range	Process temperature range	Temperature class (EPL Gc)
-40 to +45°C (-40 to +113°F)	-40 to +75°C (-40 to +167°F) (2)	T6
-40 to +60°C (-40 to +140°F)	-40 to +90°C (-40 to +194°F) (1) (2)	T5
-40 to +60°C (-40 to +140°F)	-40 to +125°C (-40 to +257°F) (1) (2)	T4


- Remote version: electronics enclosure

Ambient temperature	Temperature class
range	(EPL Gc)
-40 to +45°C (-40 to +113°F)	T6
-40 to +60°C (-40 to +140°F)	T4

(1) For process temperature > 85 °C: Only applicable for versions with thermal isolator

 (2) With option FFKM O-ring seal: Lower process temperature limited to -20 $^{\circ}\text{C}~$ (-4 $^{\circ}\text{F})$









Notes for use in Hazardous Locations

INMETRO:

Flameproof with intrinsically safe output to probe

Application in Zone 0 (cat 1G):

Ambient	Process	
temperature range	temperature range	
-20 to +60°C (-4 to +140°F)	-20 to +60°C (-4 to +140°F)	

Application in Zone 1 (cat 2G):

Ambient	Process	Temperature
temperature range	temperature range	class
-40 to +70°C (-40 to +158°F)	-40 to +85°C (-40 to +185°F)	T6
-40 to +85°C (-40 to +185°F)	-40 to +95°C (-40 to +203°F) (1)	T5
-40 to +85°C (-40 to +185°F)	-40 to +125°C (-40 to +257°F) (1)	T4

⁽¹⁾ For process temperature > 85 °C: Only applicable for versions with thermal isolator

Dust ignition proof

The maximum surface temperature of T 100 °C is based on a maximum ambient temperature of +85 °C.

FM / CSA:

Explosion proof / Dust ignition proof

Ambient	Process	Temperature	
temperature range	temperature range	class	
-40 to +85°C (-40 to +185°F)	-40 to +125°C (-40 to +257°F)	T4	

Intrinsically safe

Installation shall be done according to "FM/CSA Approval - Connection drawing" on page 23

Ambient		Process	Temperature
	temperature range	temperature range	class
	-40 to +40°C (-40 to +40°F)	-40 to +40°C (-40 to +40°F)	T6
	-40 to +85°C (-40 to +185°F)	-40 to +125°C (-40 to +257°F)	T4



Level limit switch

Series CN 8000

Technical Information / Instruction manual



Probe modifications


Shortening the cable (cable version)

CAUTION:

Possible only with the general purpose configuration; please verify against product nameplate.


Preparation

Determine the required cable length, and subtract that amount from the actual length, to find the excess length to cut off. For example: 10 m (actual length) minus 9 m (required length) = 1 m (excess)

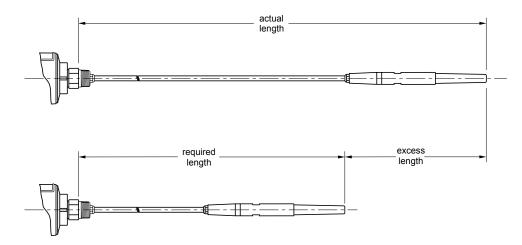


Steps

1. Unscrew the cable gland compression nut to relieve the sealing cone and release the cable.

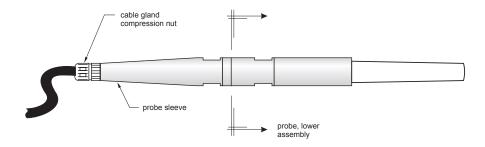

2. Unscrew the probe sleeve from the lower assembly using two 17 mm (0.67") wrenches across the flat surfaces, as shown below.

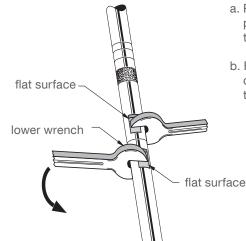


- a. Place two wrenches on the flat surfaces of the probe as shown: hold the probe sleeve still, and turn the lower wrench counter-clockwise to loosen the probe lower assembly.
- b. Remove the lower assembly by turning the threaded electrode end counter-clockwise: this exposes the three leads, the tension block, and the steel spacer.





Probe modifications

3. Remove the heat shrink insulation covering the solder connections.

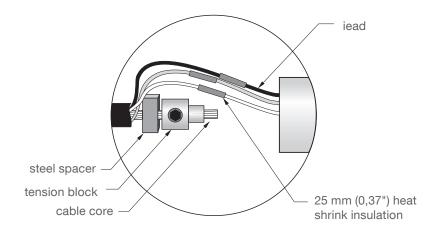

4. Unsolder the connections.

Note: Do not cut the connections to the probe leads, as this can render them too short to work with later.

- 5. Remove the tension block, and save it for re-use in step 7.
- 6. Calculate the excess cable, then add back an allowance of 75 mm (3") for making the connections:

For example, 1000 mm = excess less 75 mm = allowance for connections 925 mm = excess cable to be removed

7. Cut off the excess cable.


Caution: To prevent wires from being pulled through the cable bundle, secure each wire close to where the outer black jacket stops prior to stripping cable insulation from it.

- 8. Remove approximately 75 mm (3") of cable jacket, shield, and filler strands.
- 9. Cut off the excess cable core, making sure the cut is clean and square
- 10. Replace the steel spacer and tension block, then shorten the leads to approximately 40 mm (1.6").
- 11. Prepare the leads for soldering, and if heat shrink is used to insulate splices, remember to slip on the heat shrink before soldering the leads. (Note: white heat shrink has been applied to the orange wire to simplify correct connection.)
- 12. Make the solder connections and position the heat shrink to completely insulate each solder connection before shrinking it.





Probe modifications

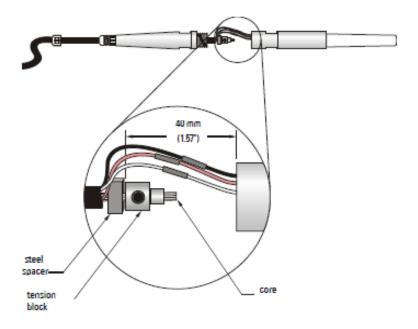

- 13. Remove any excess cable core, if necessary.
- 14. Apply PTFE type tape/sealant to all threads.
- 15. Add a pre-twist to the wires before screwing the probe sleeve and lower probe assembly together: hold the probe sleeve still, and gently turn the lower probe assembly counter-clockwise about 5 full turns. This avoids the wires being broken when the probe and probe sleeve are assembled.
- 16. Screw the lower probe assembly clockwise into the probe sleeve, and tighten it with a 17 mm (0.67") wrench.
- 17. Check that the instrument is operating correctly, using the test procedure (see external Operating Manual).